



\* Sourced from 3rd parties

\*\* Must be screwed onto a solid surface

\*\*\* Without LH 48 design monitor stand must be turned by 90°

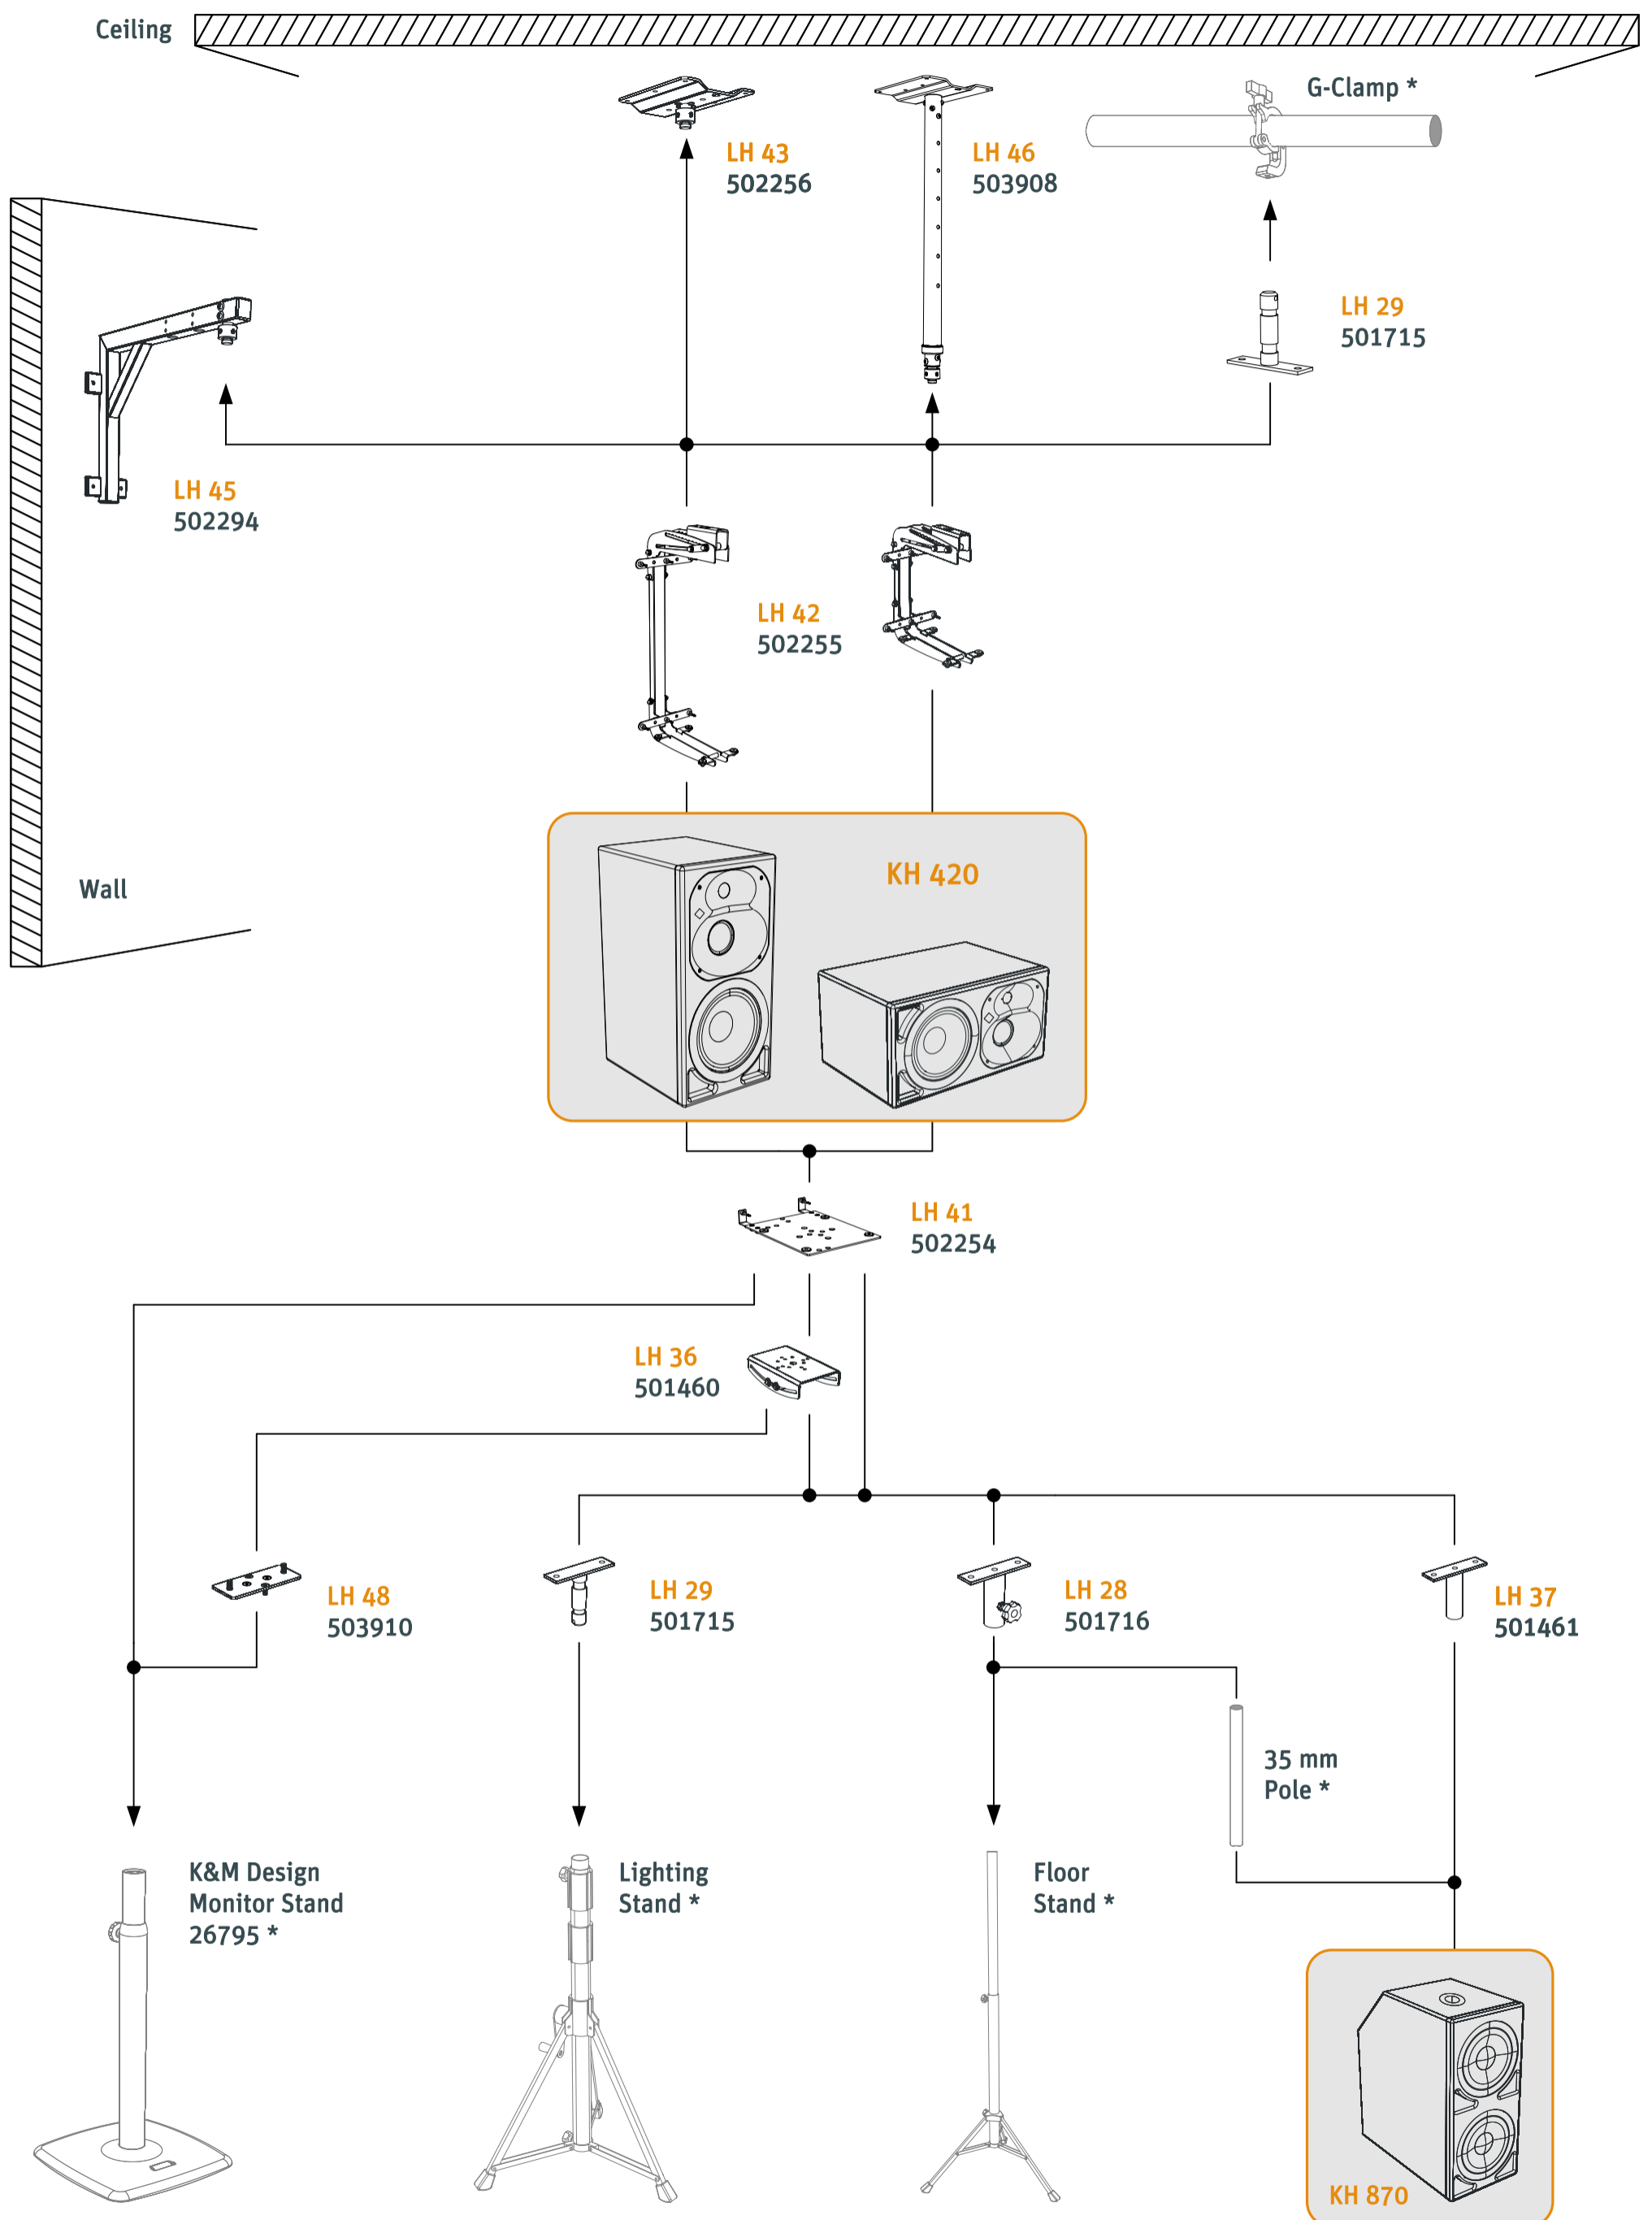


\* Sourced from 3rd parties

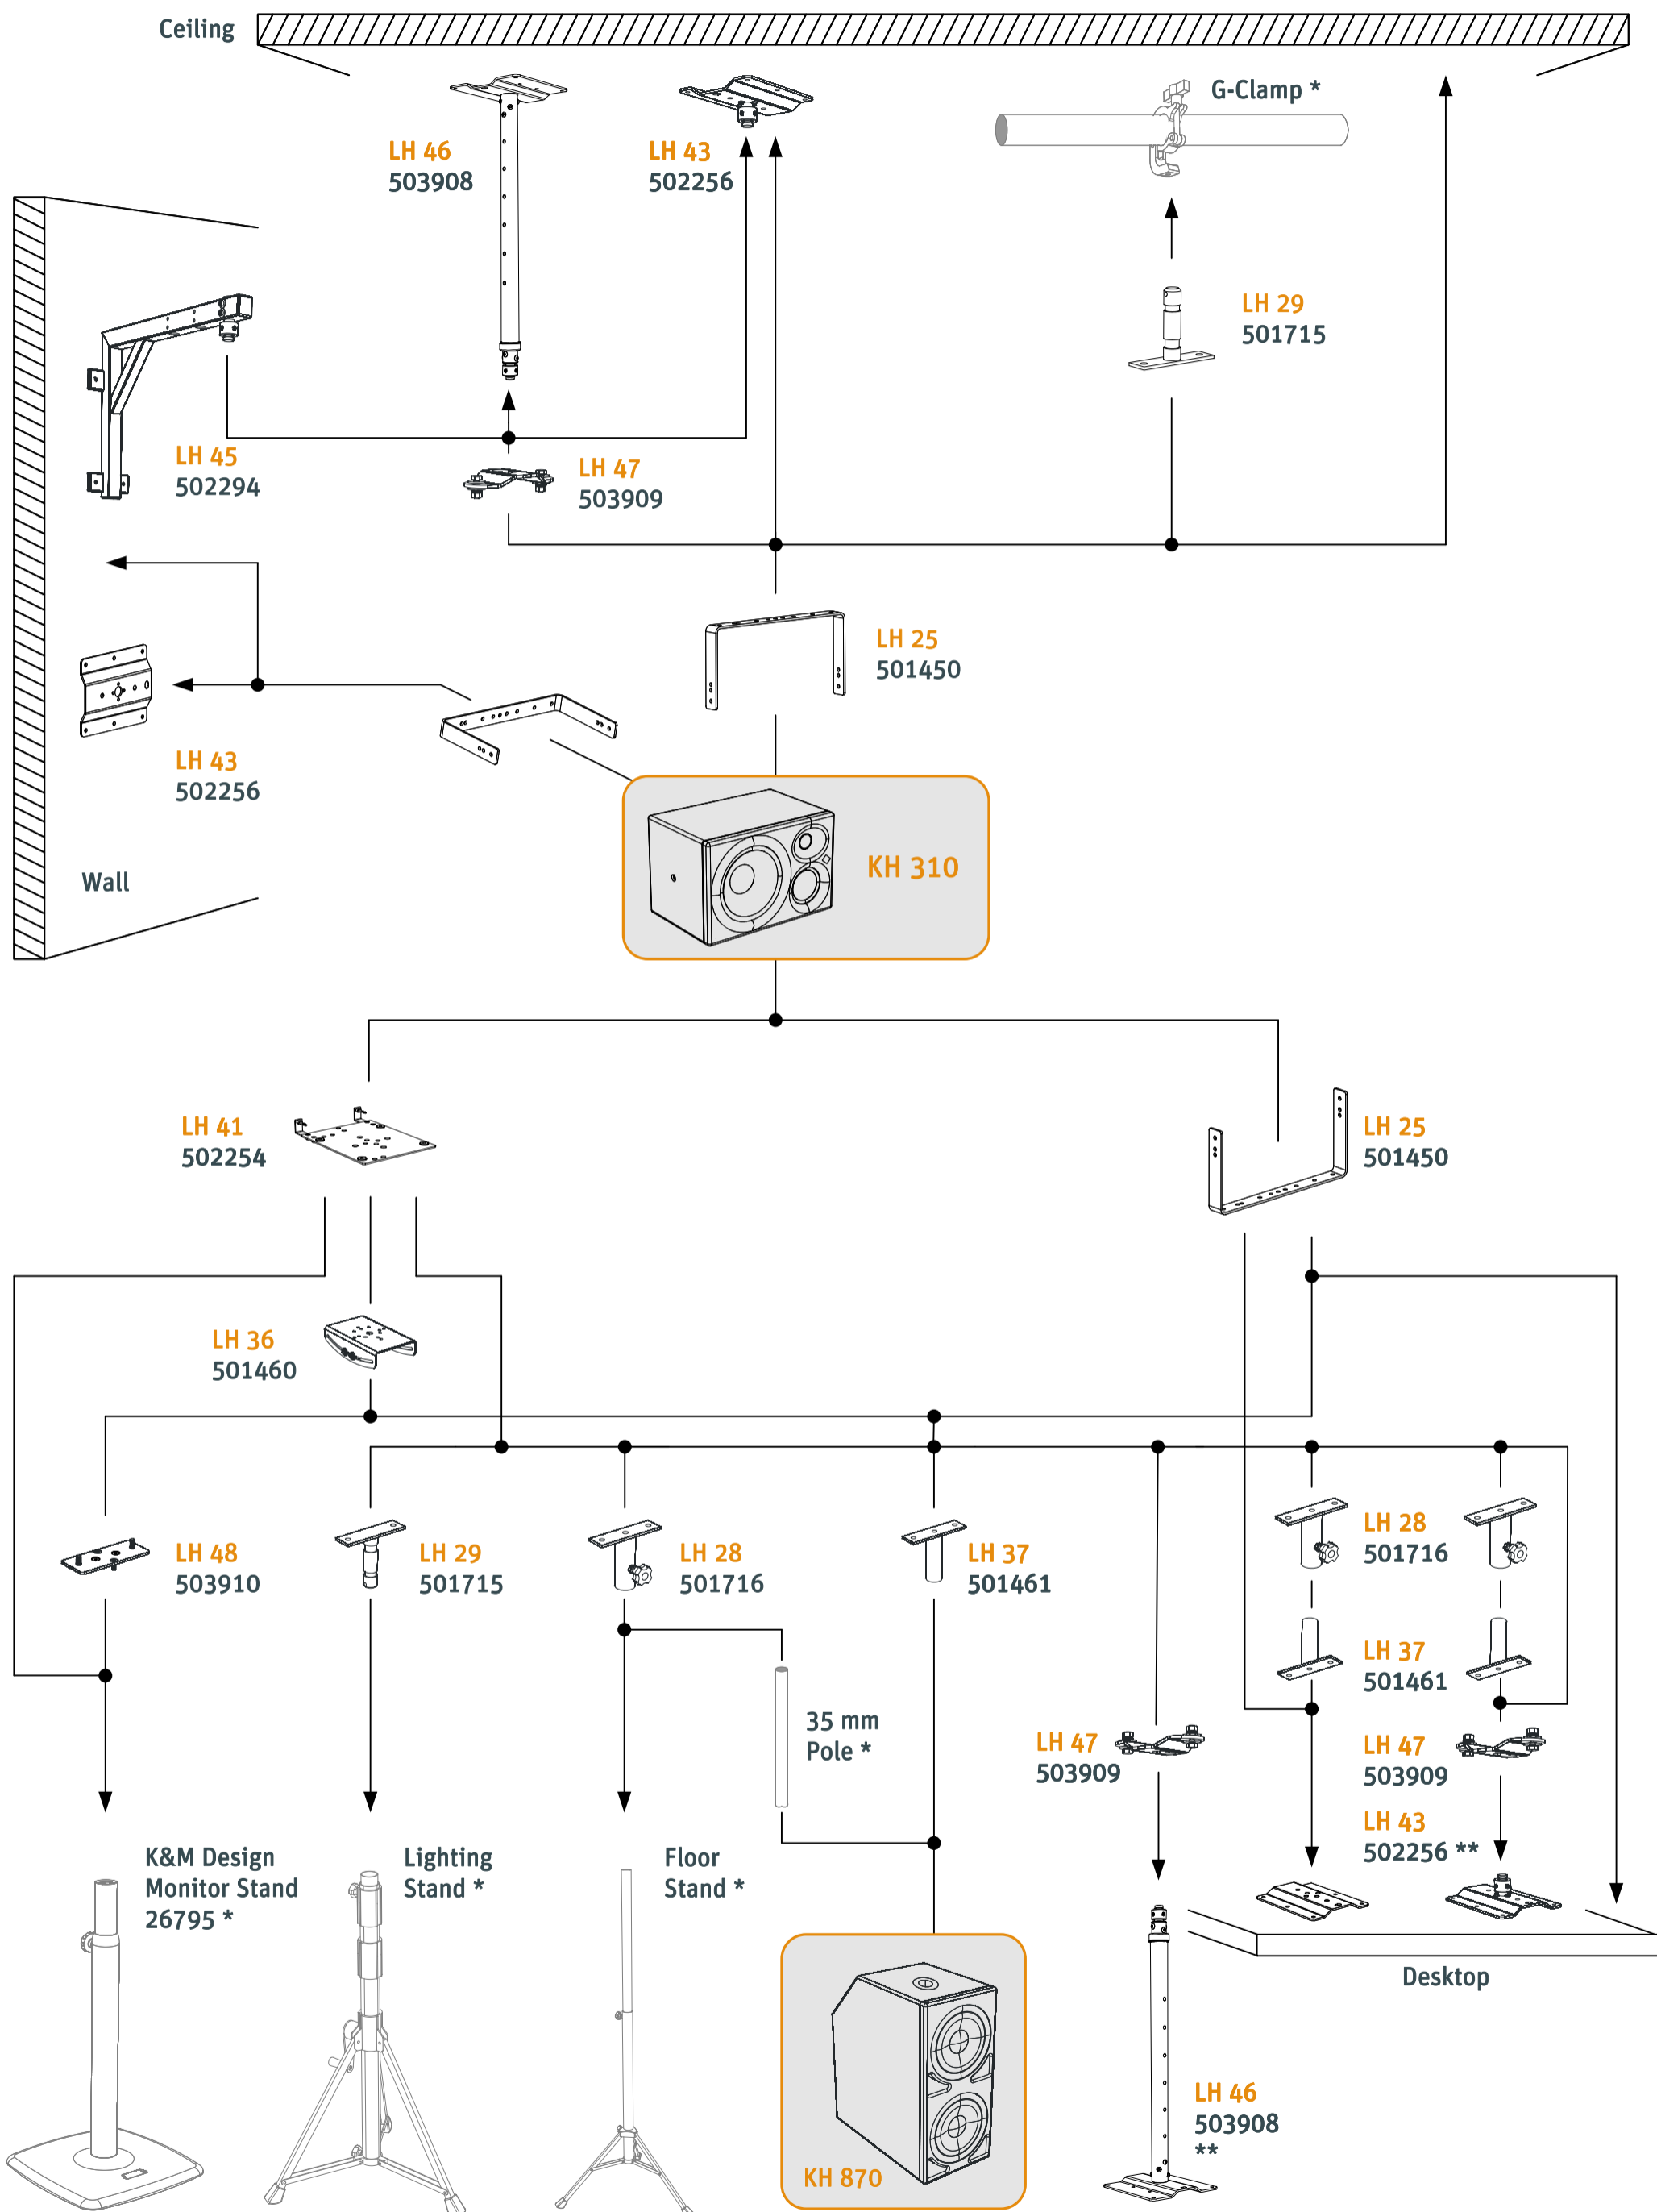

\* Sourced from 3rd parties


\*\* Must be screwed onto a solid surface

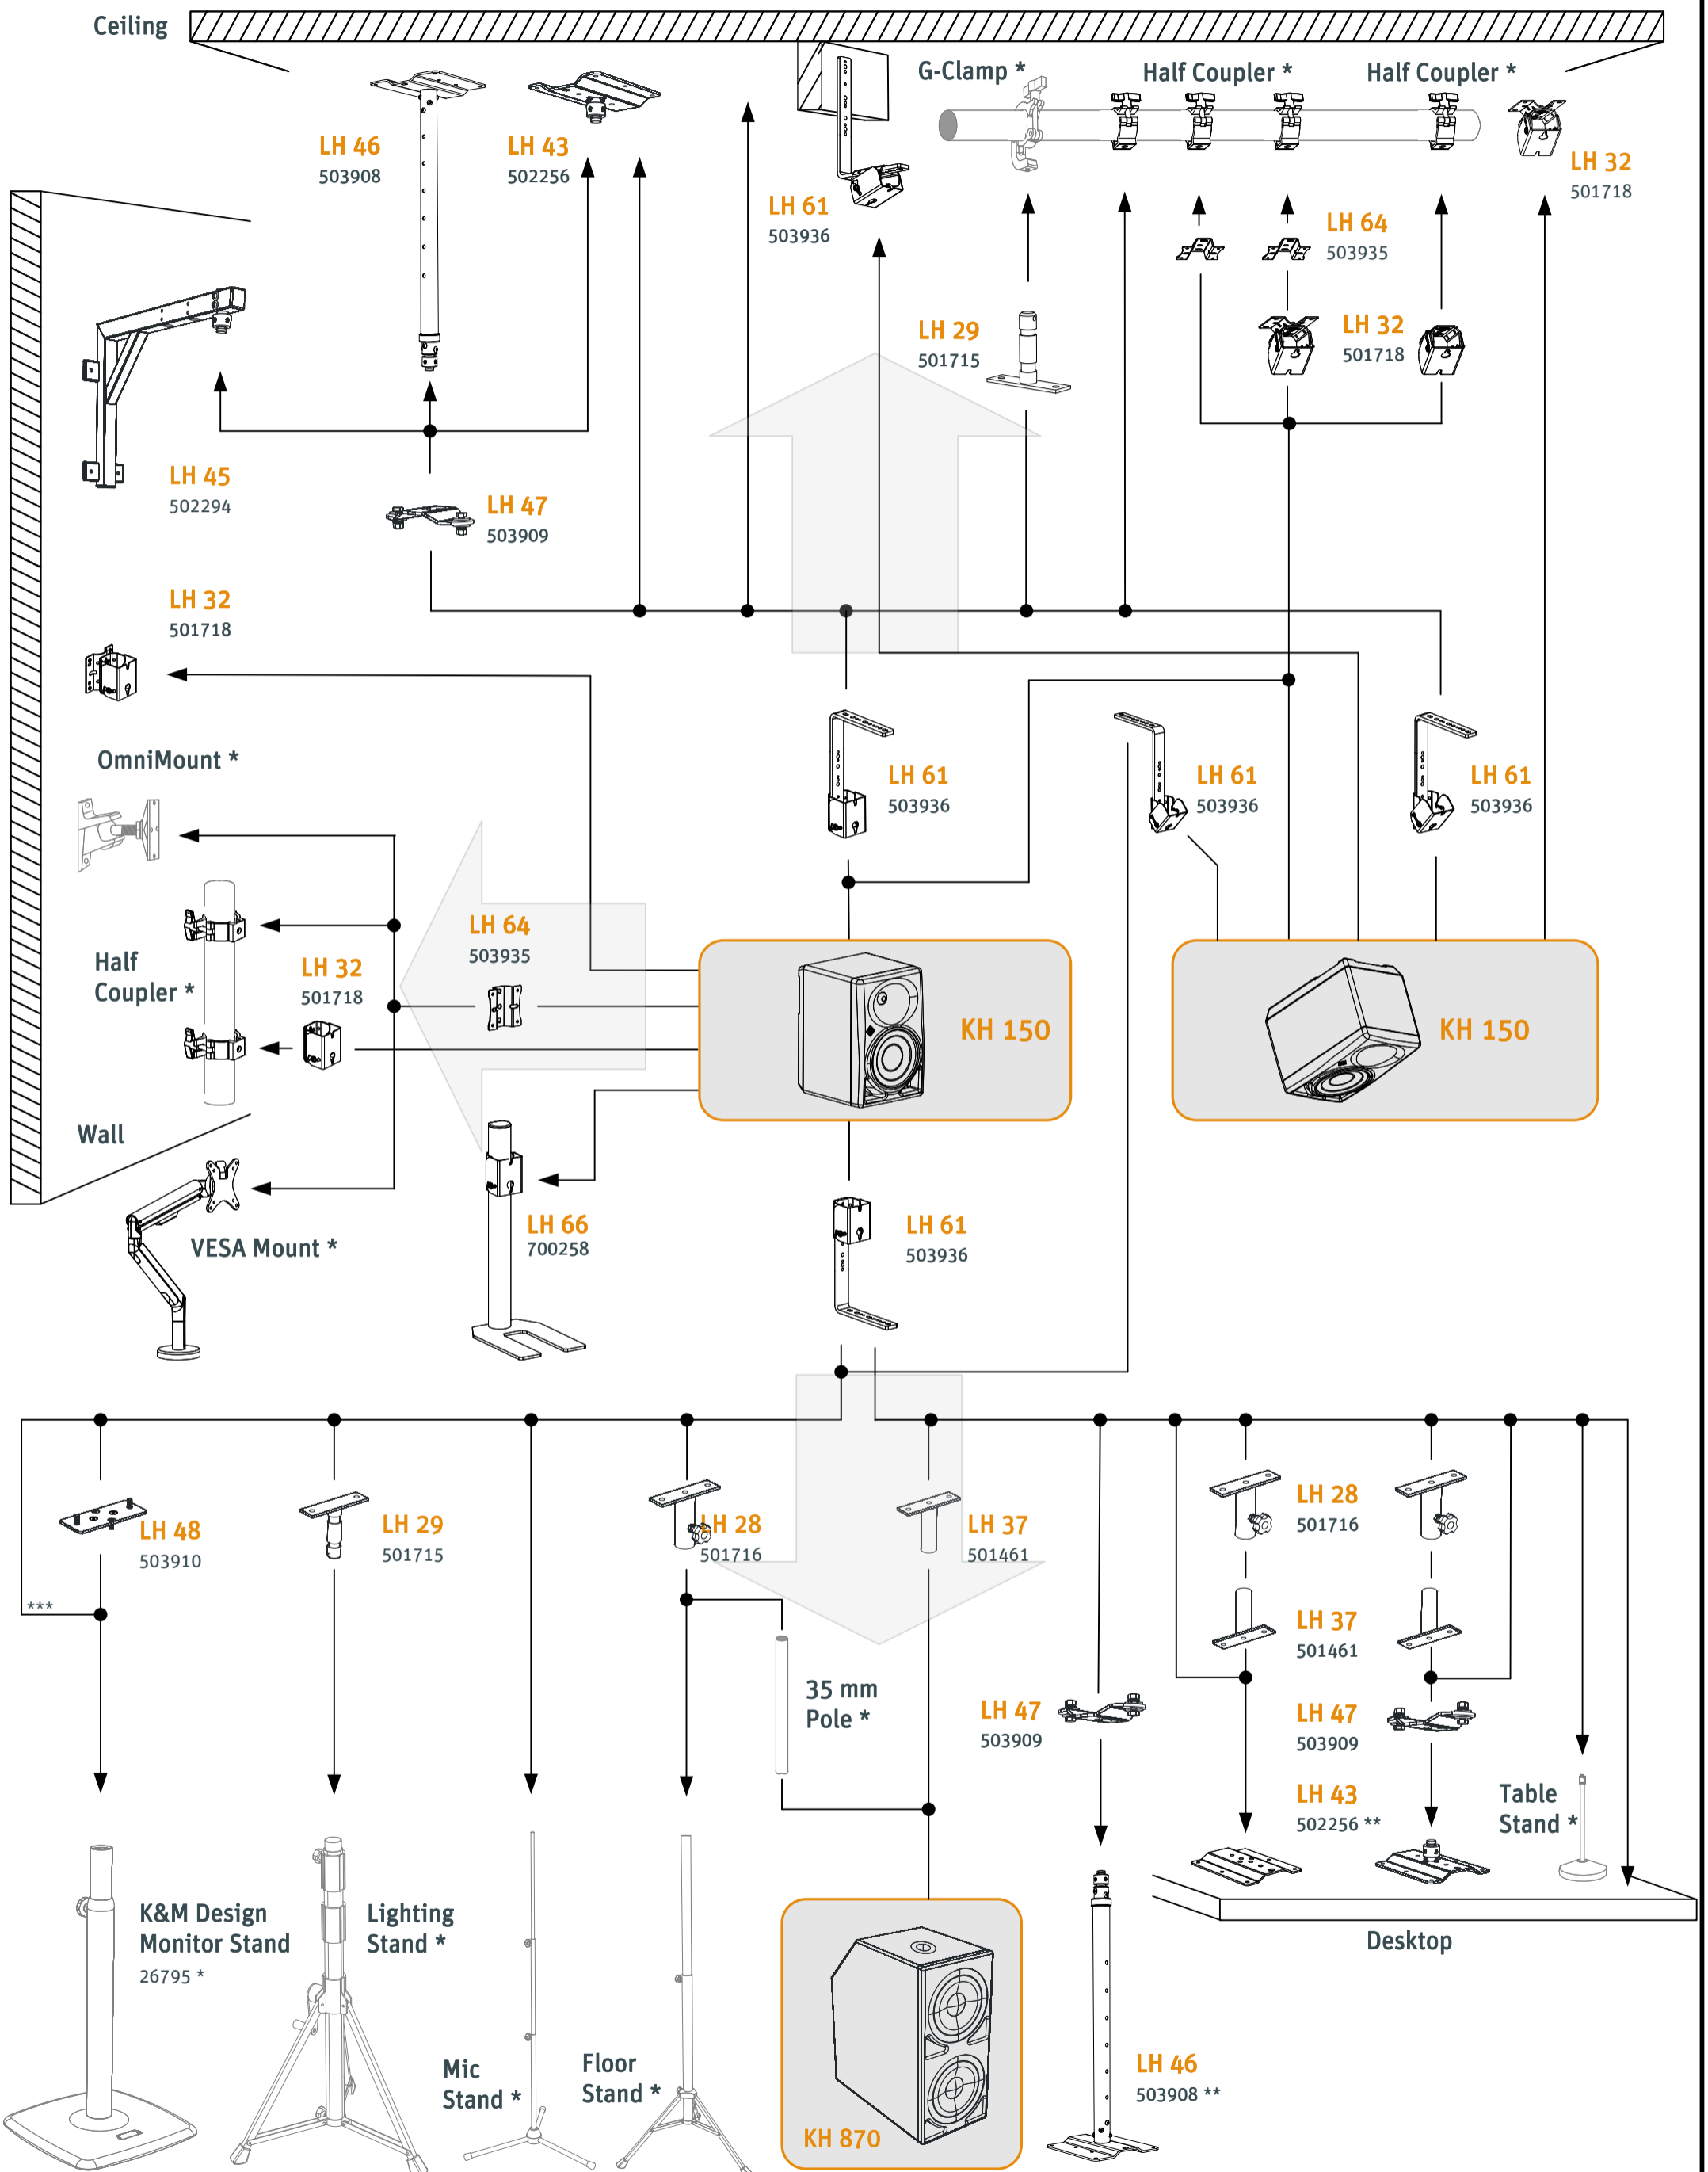

\* Sourced from 3rd parties

\*\* Must be screwed onto a solid surface

\*\*\* Without LH 48 design monitor stand must be turned by 90°

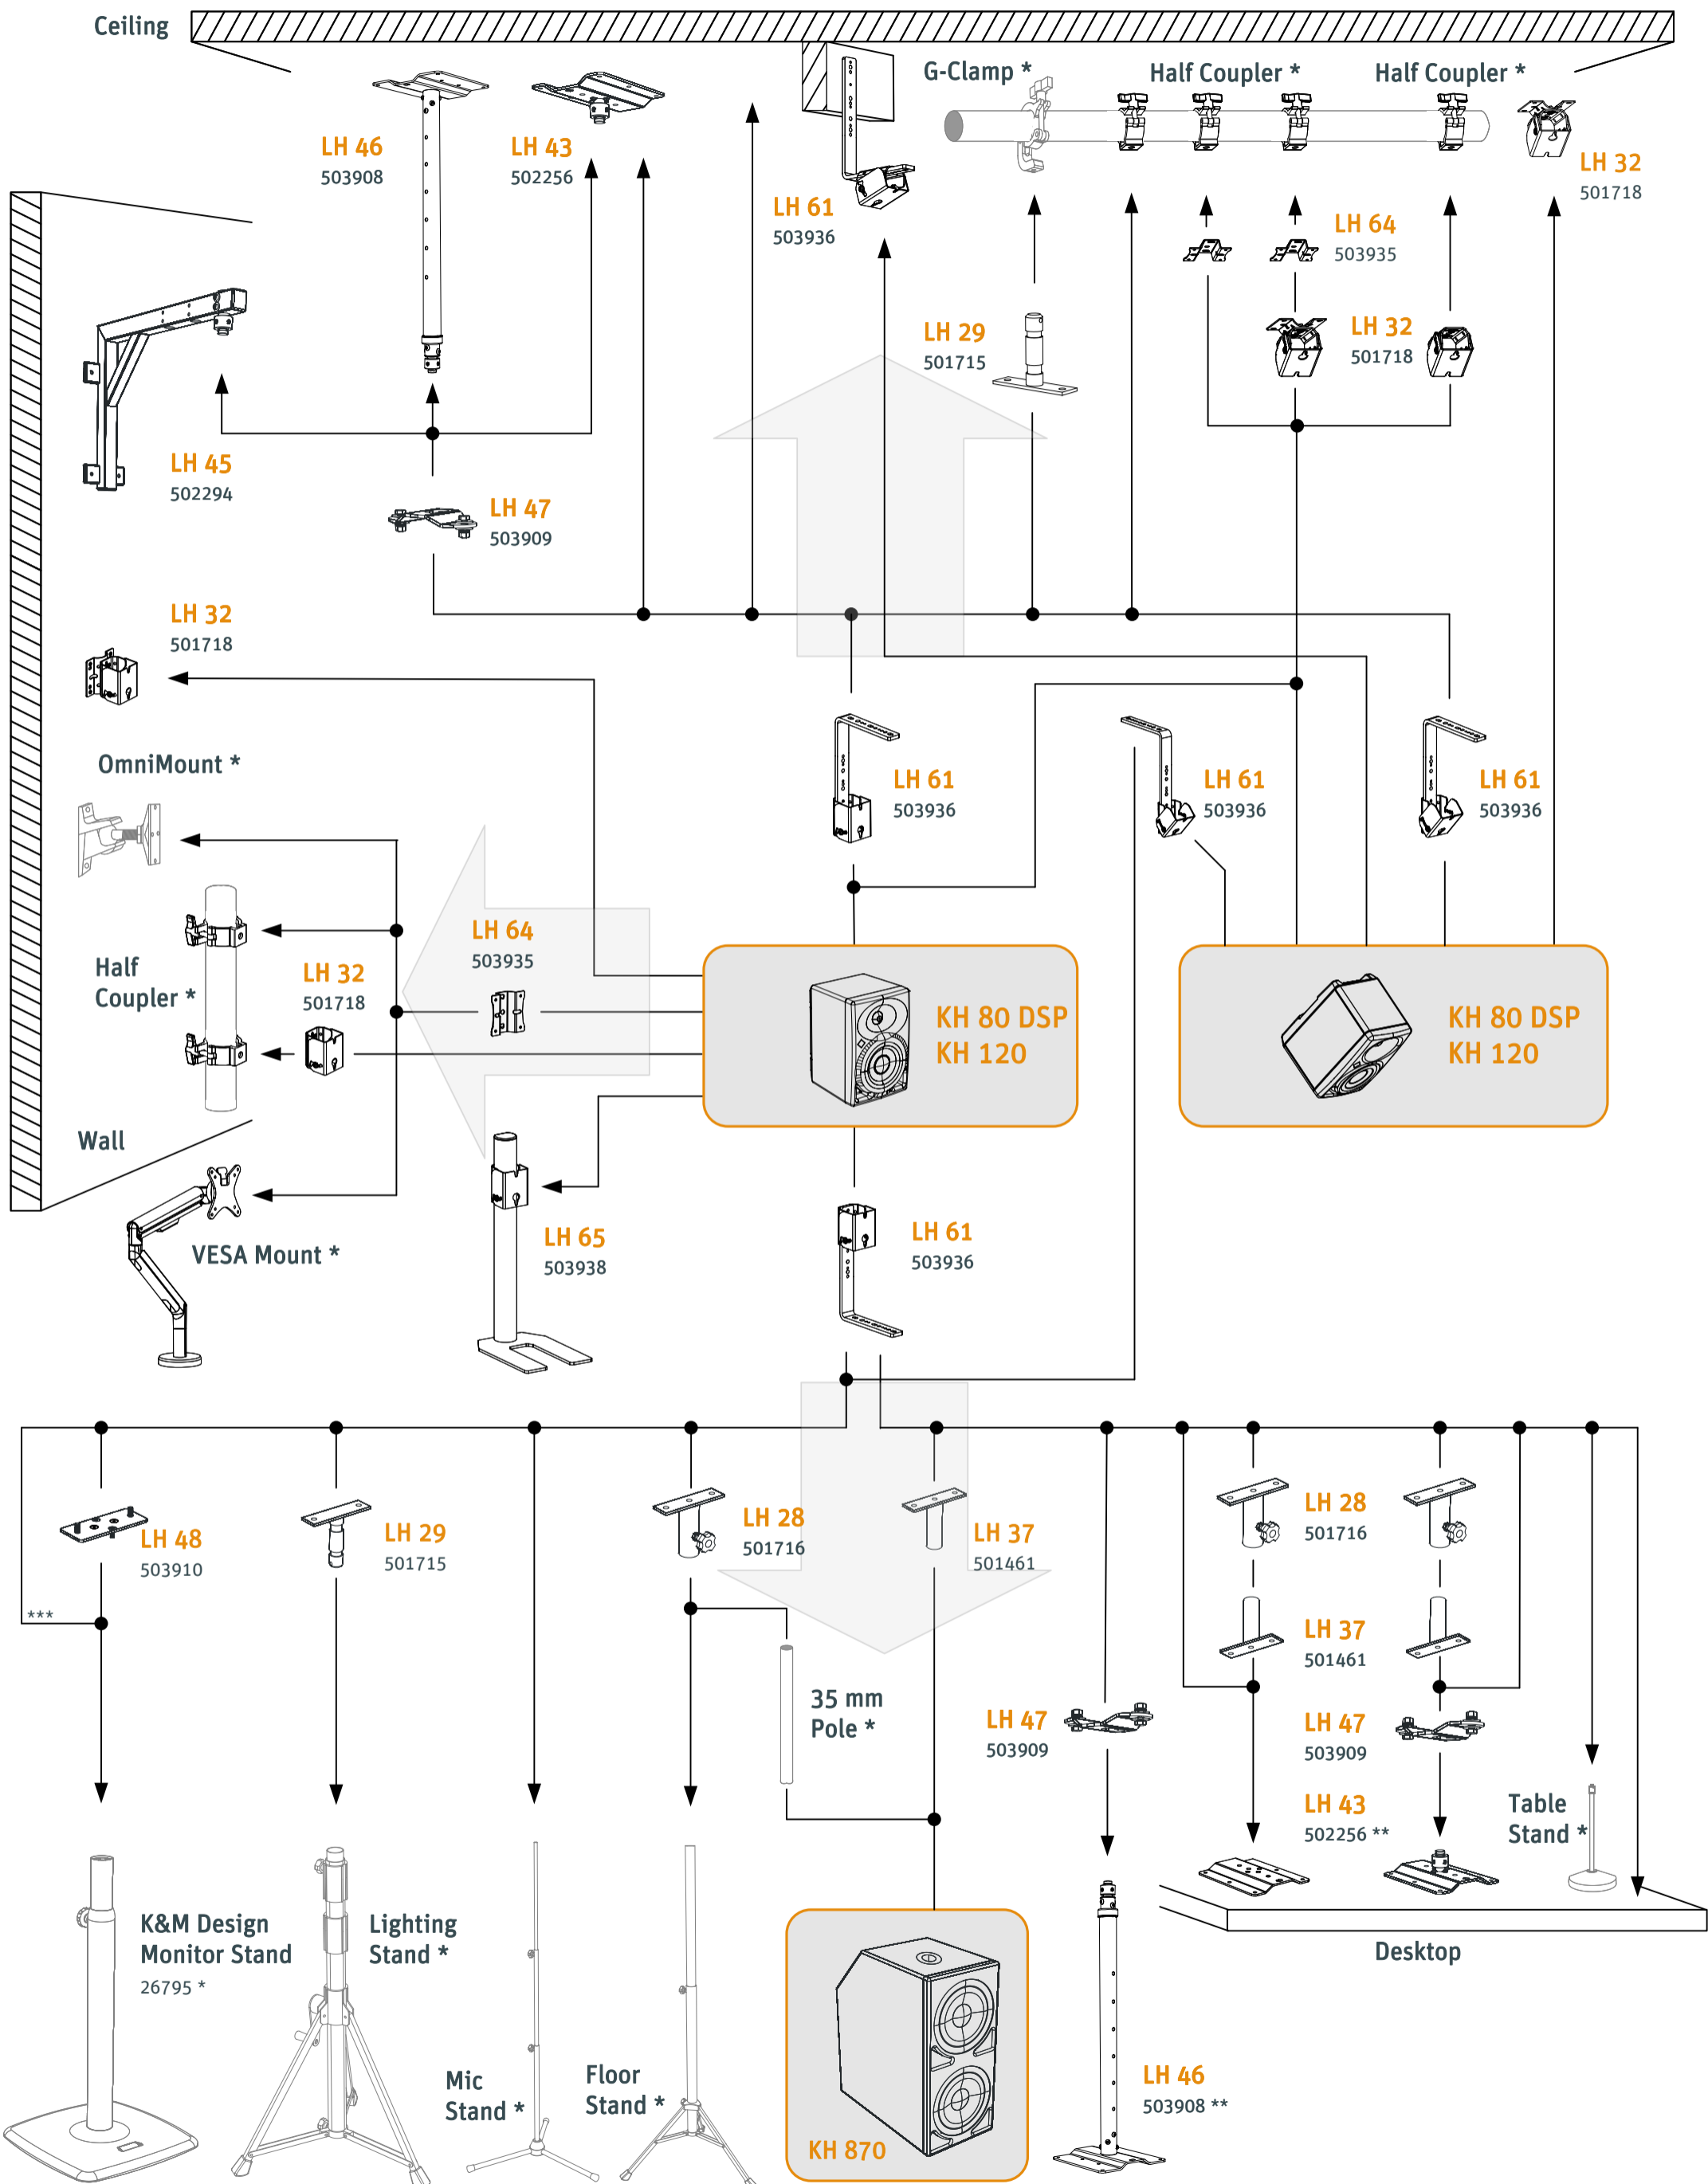

\* Sourced from 3rd parties

\*\* Must be screwed onto a solid surface

\*\*\* Without LH 48 design monitor stand must be turned by 90°

## KH 420

### Mounting on a floor stand (e.g. K&M 26750, 26735)

KH 420 + LH 41 + LH 28 + stand  
KH 420 + LH 41 + LH 36 + LH 28 + stand

### Mounting on a design monitor stand (e.g. K&M 26795)

KH 420 + LH 41 + K&M design stand  
KH 420 + LH 41 + LH 36 + LH 48 + K&M design stand

### Mounting on a lighting stand

KH 420 + LH 41 + LH 29 + stand  
KH 420 + LH 41 + LH 36 + LH 29 + stand

### Mounting on a subwoofer

KH 420 + LH 41 + LH 28 + pole + KH 870  
KH 420 + LH 41 + LH 36 + LH 28 + pole + KH 870  
KH 420 + LH 41 + LH 36 + LH 37 + KH 870  
KH 420 + LH 41 + LH 37 + KH 870

### Mounting on a wall

KH 420 + LH 42 + LH 45 + wall

### Mounting off a ceiling

KH 420 + LH 42 + LH 43 + ceiling  
KH 420 + LH 42 + LH 46 + ceiling

### Mounting on off a lighting or truss bar

KH 420 + LH 42 + LH 29 + G-clamp + bar

## KH 310

### Mounting on a floor stand (e.g. K&M 26750, 26735)

KH 310 + LH 25 + LH 28 + stand  
KH 310 + LH 41 + LH 28 + stand  
KH 310 + LH 41 + LH 36 + LH 28 + stand

### Mounting on a design monitor stand (e.g. K&M 26795)

KH 310 + LH 25 + LH 48 + K&M design stand  
KH 310 + LH 41 + K&M design stand  
KH 310 + LH 41 + LH 36 + LH 48 + K&M design stand

### Mounting on a lighting stand

KH 310 + LH 25 + LH 29 + stand  
KH 310 + LH 41 + LH 29 + stand  
KH 310 + LH 41 + LH 36 + LH 29 + stand

### Mounting on a subwoofer

KH 310 + LH 25 + LH 28 + pole + KH 870  
KH 310 + LH 25 + LH 37 + KH 870  
KH 310 + LH 41 + LH 28 + pole + KH 870  
KH 310 + LH 41 + LH 37 + KH 870  
KH 310 + LH 41 + LH 36 + LH 28 + pole + KH 870  
KH 310 + LH 41 + LH 36 + LH 37 + KH 870

### Mounting on a surface (desktop or floor)

KH 310 + LH 25 + surface  
KH 310 + LH 25 + LH 43 + surface  
KH 310 + LH 25 + LH 47 + LH 43 + surface  
KH 310 + LH 25 + LH 28 + LH 37 + LH 43 + surface  
KH 310 + LH 25 + LH 28 + LH 37 + LH 47 + LH 43 + surface  
KH 310 + LH 25 + LH 47 + LH 46 + surface  
KH 310 + LH 41 + LH 47 + LH 43 + surface  
KH 310 + LH 41 + LH 28 + LH 37 + LH 43 + surface  
KH 310 + LH 41 + LH 28 + LH 37 + LH 47 + LH 43 + surface  
KH 310 + LH 41 + LH 47 + LH 46 + surface

### Mounting on a wall

KH 310 + LH 25 + wall  
KH 310 + LH 25 + LH 43 + wall  
KH 310 + LH 25 + LH 47 + LH 45 + wall

### Mounting off a ceiling

KH 310 + LH 25 + ceiling  
KH 310 + LH 25 + LH 43 + ceiling  
KH 310 + LH 25 + LH 47 + LH 43 + ceiling  
KH 310 + LH 25 + LH 47 + LH 46 + ceiling

### Mounting off a lighting or truss bar

KH 310 + LH 25 + LH 29 + G-clamp + bar

## KH 150

### Mounting on a floor stand (e.g. K&M 26750, 26735)

KH 150 + LH 61 + LH 28 + stand

### Mounting on a design monitor stand (e.g. K&M 26795)

KH 150 + LH 61 + K&M design stand (stand turned by 90°)  
KH 150 + LH 61 + LH 48 + K&M design stand

### Mounting on a lighting stand

KH 150 + LH 61 + LH 29 + stand

### Mounting on a microphone stand

KH 150 + LH 61 + microphone stand

### Mounting on a subwoofer

KH 150 + LH 61 + LH 28 + pole + KH 870  
KH 150 + LH 61 + LH 37 + KH 870

### Mounting on a surface (desktop or floor)

KH 150 + LH 61 + desktop  
KH 150 + LH 61 + LH 43 + desktop  
KH 150 + LH 61 + LH 47 + LH 43 + desktop  
KH 150 + LH 61 + LH 28 + LH 37 + LH 43 + desktop  
KH 150 + LH 61 + LH 28 + LH 37 + LH 47 + LH 43 + desktop  
KH 150 + LH 61 + LH 47 + LH 46 + floor  
KH 150 + LH 66 + desktop  
KH 150 + LH 61 + table stand + desktop

### Mounting on an OmniMount or VESA mount

KH 150 + LH 64 + OmniMount  
KH 150 + LH 64 + VESA mount

### Mounting on a wall

KH 150 + LH 32 + wall  
KH 150 + LH 61 + LH 47 + LH 45 + wall

### Mounting off a ceiling

KH 150 + LH 32 + ceiling  
KH 150 + LH 61 + ceiling  
KH 150 + LH 61 + LH 43 + ceiling  
KH 150 + LH 61 + LH 47 + LH 43 + ceiling  
KH 150 + LH 61 + LH 47 + LH 46 + ceiling

### Mounting off a lighting or truss bar

KH 150 + LH 61 + LH 29 + G-clamp + bar  
KH 150 + LH 61 + Half coupler + bar  
KH 150 + LH 32 + half coupler + bar  
KH 150 + LH 64 + half coupler + bar  
KH 150 + LH 32 + LH 64 + half coupler + bar

## KH 80 DSP / KH 120

### Mounting on a floor stand (e.g. K&M 26750, 26735)

KH80/120 + LH 61 + LH 28 + stand

### Mounting on a design monitor stand (e.g. K&M 26795)

KH80/120 + LH 61 + K&M design stand (stand turned by 90°)  
KH80/120 + LH 61 + LH 48 + K&M design stand

### Mounting on a lighting stand

KH80/120 + LH 61 + LH 29 + stand

### Mounting on a microphone stand

KH80/120 + LH 61 + microphone stand

### Mounting on a subwoofer

KH80/120 + LH 61 + LH 28 + pole + KH 870  
KH80/120 + LH 61 + LH 37 + KH 870

### Mounting on a surface (desktop or floor)

KH80/120 + LH 61 + desktop  
KH80/120 + LH 61 + LH 43 + desktop  
KH80/120 + LH 61 + LH 47 + LH 43 + desktop  
KH80/120 + LH 61 + LH 28 + LH 37 + LH 43 + desktop  
KH80/120 + LH 61 + LH 28 + LH 37 + LH 47 + LH 43 + desktop  
KH80/120 + LH 61 + LH 47 + LH 46 + floor  
KH80/120 + LH 65 + desktop  
KH80/120 + LH 61 + table stand + desktop

### Mounting on an OmniMount or VESA mount

KH80/120 + LH 64 + OmniMount  
KH80/120 + LH 64 + VESA mount

### Mounting on a wall

KH80/120 + LH 32 + wall  
KH80/120 + LH 61 + LH 47 + LH 45 + wall

### Mounting off a ceiling

KH80/120 + LH 32 + ceiling  
KH80/120 + LH 61 + ceiling  
KH80/120 + LH 61 + LH 43 + ceiling  
KH80/120 + LH 61 + LH 47 + LH 43 + ceiling  
KH80/120 + LH 61 + LH 47 + LH 46 + ceiling

### Mounting off a lighting or truss bar

KH80/120 + LH 61 + LH 29 + G-clamp + bar  
KH80/120 + LH 61 + Half coupler + bar  
KH80/120 + LH 32 + half coupler + bar  
KH80/120 + LH 64 + half coupler + bar  
KH80/120 + LH 32 + LH 64 + half coupler + bar